

Features

- 2 switch outputs
- Selectable sound lobe width
- TEACH-IN input
- Temperature compensation

Electrical connection

(BK) 📥

Core colours in accordance with EN 60947-5-2.

+ U_B

- U_R

Switch output 1

Switch output 2

Teaching input

Standard symbol/Connections:

2 (WH)

3 (BU)

(GY)

(version E01, npn)

U

• Very small unusable area

Technical data

General specifications

Sensing range Adjustment range 30 ... 500 mm 50 ... 500 mm Unusable area 0 ... 30 mm Standard target plate Transducer frequency Response delay approx. 50 ms

Indicators/operating means LED yellow

I FD red

Electrical specifications

Operating voltage No-load supply current I₀

Input Input type

Output Output type Repeat accuracy Rated operational current I_e Voltage drop U_d

Switching frequency f Range hysteresis H Temperature influence Standard conformity

Standards

Ambient conditions Ambient temperature Storage temperature

Mechanical specifications

Protection degree Connection Material Housing Transducer Mass

1 % of the set operating distance

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

brass, nickel-plated

Connector V15



CE

M18 x 1

75 85

100 mm x 100 mm approx. 380 kHz

LEDS

M12 x 1

indication of the switching state flashing: TEACH-IN function object detected

"Error", object uncertain in TEACH-IN function: No object detected

10 ... 30 V DC , ripple 10 $\%_{\mbox{\footnotesize SS}}$

 \leq 50 mA

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 k Ω ; TEACH-IN pulse: \geq 1 s

2 switch outputs npn, NO/NC, parameterisable

2 x 100 mA , short-circuit/overload protected

≤ 3 V max. 8 Hz

± 1,5 % of full-scale value

connector V15 (M12 x 1), 5 pin

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

130226_ENG.xml

Model number

Adjusting the switching points

The ultrasonic sensor features two switch outputs with one teachable switching point. The switching points are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with -U_B, A2 with +U_B.

TEACH-IN switching point for switch output 1

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with -UB

TEACH-IN switching point for switch output 2

- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with +U_B

TEACH-IN detection of object presence

- Cover the sensor with your hand, or remove all objects from the sensing range
- TEACH-IN switching point for switch output 1 with -U_B
- TEACH-IN switching point for switch output 2 with +UB

Comments

Only one switch output can be configured for detection of presence of objects. If the sensor detects an objects within the maximum detection range, the switch output switches.

Default setting of switching points

Switch output 1: unusable area

Switch output 2: nominal sensing range

LED Displays

Displays in dependence on operating mode	Red LED	LED 1 yellow	LED 2 yellow
TEACH-IN switching point 1 Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	flashes off off	off off off
TEACH-IN switching point 2: Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	off off off	flashes off off
Normal operation	off	switch state 1	switch state 2
Fault	on	previous state	previous state

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

- switch off the power supply
- connect the Teach-input wire to -UR
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range
- disconnect the Teach-input wire from -U_B and the changing is saved


2. Wide angle sound cone

- switch off the power supply
- connect the Teach-input wire with +U_R
- switch on the power supply
- the red LED double-flashes with a long pause before the


Characteristic curves/additional information

UB500-18GM75-E01-V15

Characteristic response curve

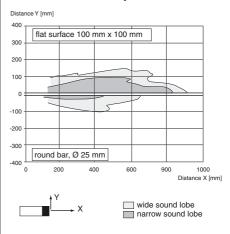

Programmed switching output function

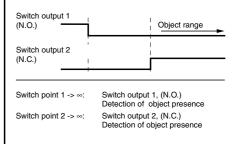

Accessories

Programming device

UB-PROG3

Mounting aids/fixing flanges

OMH-04

BF 18

BF 18F

BF 5-30

Sound deflector

UVW90-K18

Cable sockets*)

V15-G-2M-PVC V15-W-2M-PUR

*) For additional cable sockets see section "Accessories".

Ultrasonic sensor

UB500-18GM75-E01-V15

- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-input wire from +U_B and the changing is saved

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.