

Features

- Switch output
- 5 different output functions can be set
- TEACH-IN input
- · Synchronisation options
- · Deactivation option
- Temperature compensation
- · Insensitive to compressed air

Electrical connection

+ U_B

- Teaching input

Synchronous

Switch output

Standard symbol/Connections:

1 (BN) 2 (WH)

5 (GY)

4 (BK)


3 (BU)

Core colours in accordance with EN 60947-5-2.

Sensotronik AB •

(version E5, pnp)

U

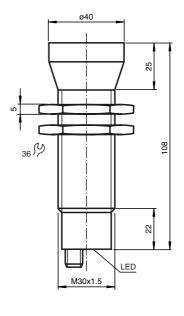

Technical data

General specifications

200 ... 4000 mm

Sensing range Adjustment range Unusable area 0 ... 200 mm Standard target plate Transducer frequency approx. 85 kHz Response delay

Indicators/operating means

LED green

LED yellow

LED red

Electrical specifications

Operating voltage No-load supply current I₀

Input/Output

Synchronisation

Synchronisation frequency Common mode operation

Multiplex operation Input

Input type

Output Output type Repeat accuracy Rated operational current I_e

Voltage drop U_d Switching frequency f

Range hysteresis H Temperature influence

Standard conformity Standards

Ambient conditions Ambient temperature Storage temperature Mechanical specifications

Protection degree Connection Material Housing

Transducer Mass

240 ... 4000 mm

100 mm x 100 mm approx. 325 ms

permanent: Power-on flashing: TEACH-IN function object detected permanent: switching state switch output flashing: TEACH-IN function

normal operation: "fault"
TEACH-IN function: no object detected

10 ... 30 V DC , ripple 10 $\%_{\mbox{\footnotesize SS}}$

 \leq 50 mA

bi-directional 0 level -U_B...+1 V 1 level: +4 V...+U_B input impedance: > 12 KOhm

synchronisation pulse: $\geq 100~\mu s,$ synchronisation interpulse period: $\geq 2~ms$

CE

 \leq 13/n Hz, n = number of sensors

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 k Ω ; TEACH-IN pulse: \geq 1 s

1 switch output E5, pnp NO/NC, parameterisable

 \leq 0,5 % of switching point 200 mA, short-circuit/overload protected

≤ 2,5 V ≤ 1,5 Hz

1 % of the set operating distance

< 2 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

connector V15 (M12 x 1), 5 pin

brass, nickel-plated, plastic components PBT

epoxy resin/hollow glass sphere mixture; polyurethane foam

180 g

Connector V15



097972_ENG.xml

2004-11-04

Description of the sensor functions

Synchronisation

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. The synchronisation of multiple sensors can be realised as follows:

External synchronisation:

The sensor can be synchronised by the external application of a square wave voltage. A synchronisation pulse at the synchronisation input starts a measuring cycle. The pulse must have a duration greater than 100 µs. The measuring cycle starts with the falling edge of a synchronisation pulse. Two operating modes are available:

- 1. Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchro-
- 2. The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.

Internal synchronisation:

The synchronisation connections of up to 5 sensors capable of internal synchronisation are connected to one another. When power is applied, these sensors will operate in multiplex mode.

The state of the switch output will not change until the switching threshold has been exceeded five times as an average of the five measurements is determined internally. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor.

Synchronisation cannot be performed during TEACH-IN and vice versa. The sensors must be operated in an unsynchronised manner to teach the switching point.

A high level at the synchronisation input disables the sensor.

Note:

If the option for synchronisation is not used, the synchronisation input has to be connected to ground (0V) or the sensor has to be operated via a V1 cable connector (4-pin).

Adjusting the switching points

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage -U_B or +U_B to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Evaluation limit A1 is taught with -UB, A2 with +UB. For simple setting the switching point and the output functions the programming unit UB-PROG2 can be used.

Five different output functions can be set:

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. One switching point, normally-open function
- 4. One switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UR
- Set target to far switching point
- TEACH-IN switching point A2 with +U_R

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_R
- Set target to far switching point
- TEACH-IN switching point A1 with -UB

TEACH-IN one switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B


TEACH-IN one switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B

UB4000-30GM-E5-V15


Characteristic curves/additional information

Characteristic response curve

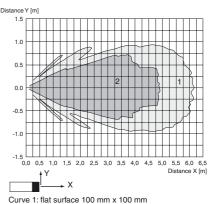

Curve 2: round bar, Ø 25 mm

Programmed switching output function

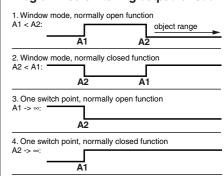

5. A1 -> ∞, A2 -> ∞: Detection of object presence Object detected: Switch output closed No object detected: Switch output open

Accessories

Mounting aid

BF30 BF5-30

Programming unit

UB-PROG2

Cable sockets *)

V15-G-2M-PVC V15-W-2M-PUR

*) For additional cable sockets see section "Accessories".

Ultrasonic sensor

UB4000-30GM-E5-V15

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +UB

TEACH-IN detection of object presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with - U_B
- TEACH-IN switching point A2 with +UB

Default setting

A1: unusable area

A2: nominal sensing range

LED Displays

Displays in dependence on operating mode	Green LED	Red LED	Yellow LED
TEACH-IN switching point			
Object detected	flashes	off	flashes
No object detected	off	flashes	flashes
Object uncertain (TEACH-IN invalid)	off	flashes	off
Normal operation	on	off	switching state
Interference	off	flashes	previous state

LED-Window

