# Ultrasonic sensor UB300-18GM40-E5-V1




## **Features**

- Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 different output functions can be set
- TEACH-IN input
- Temperature compensation


## Electrical connection

Standard symbol/Connections: (version E5, pnp)



Core colours in accordance with EN 60947-5-2.

## **Dimensions**

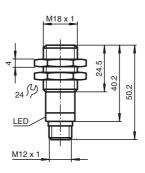

# **Technical data**

Sensing range Adjustment range Unusable area

General specifications

Standard target plate Transducer frequency Response delay

Indicators/operating means

LED yellow

LFD red

**Electrical specifications** 

Operating voltage No-load supply current I<sub>0</sub>

Input Input type

Output

Output type Default setting Repeat accuracy Rated operational current I<sub>e</sub> Voltage drop U<sub>d</sub>

Switching frequency f Range hysteresis H Temperature influence Standard conformity

Standards **Ambient conditions** 

Ambient temperature Storage temperature

Mechanical specifications Protection degree

Connection Material Housing Transducer

Mass

30 ... 300 mm

50 ... 300 mm 0 ... 30 mm 100 mm x 100 mm approx. 390 kHz approx. 30 ms

indication of the switching state flashing: TEACH-IN function object detected permanently red: Error red, flashing: TEACH-IN function, object not detected

10 ... 30 V DC , ripple 10  $\%_{\mbox{\footnotesize SS}}$ 

 $\leq$  20 mA

1 TEACH\_IN input operating distance 1: -U<sub>B</sub> ... +1 V, operating distance 2: +6 V ... +U<sub>B</sub> input impedance: > 4,7 k $\Omega$  TEACH-IN pulse:  $\geq$  1 s

CE

1 switch output E5, pnp NO/NC, parameterisable Switch point A1: 50 mm Switch point A2: 300 mm

200 mA, short-circuit/overload protected

 $\leq$  3 V

≤ 13 Hz

1 % of the set operating distance

± 1.5 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

V1 connector (M12 x 1), 4-pin

brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 q

Connector V1



127349\_ENG.xml

#### Model number

## Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

# **TEACH-IN** window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

#### **TEACH-IN** window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Set target to far switching point
- TEACH-IN switching point A1 with -UR

## **TEACH-IN** switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UR

#### **TEACH-IN** switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U<sub>B</sub>

## **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UR
- TEACH-IN switching point A2 with +U<sub>B</sub>

#### Default setting of switching points

A1 = blind range, A2 = nominal distance

## **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

#### Installation conditions


If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used

# UB300-18GM40-E5-V1

# Characteristic curves/additional information

## Characteristic response curve

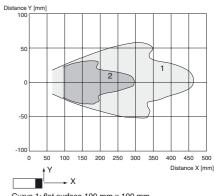

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

### Programmed switching output function

1. Window mode, normally open function object range A1 2. Window mode, normally closed function A2 < A1: A2 3. One switch point, normally open function A<sub>2</sub> 4. One switch point, normally closed function

5. A1 -> ∞, A2 -> ∞: Detection of object presence Object detected: Switch output closed No object detected: Switch output open

#### **Accessories**

# **Programming device**

**UB-PROG2** 

## Mounting aids/fixing flanges

**OMH-04** 

BF 18

**BF 18F** 

BF 5-30

#### Sound deflector

UVW90-K18

#### Cable sockets\*)

V1-G-2M-PVC V1-W-2M-PUR

\*) For additional cable sockets see section "Accessories".