Ultrasonic sensor UB500-30GM-E4-V15



Features



- 5 different output functions can be set
- TEACH-IN input
- Synchronisation options
- · Deactivation option
- Temperature compensation
- · Insensitive to compressed air



Standard symbol/Connections:


(version E4, npn)							
	1	(BN)					
	4	(BK) 🗭	Switch output				
♦	2 5 3	(WH)	•				
		(GY)	Teaching input				
		(BU)	- Synchronous				
			— - U _B				

Core colours in accordance with EN 60947-5-2.

Connector V15



Dimensions

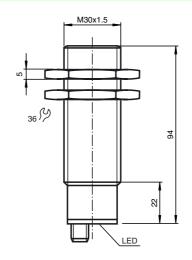

Technical data

General specifications Sensing range Adjustment range Unusable area Standard target plate Transducer frequency Response delay Indicators/operating means LED green

LED yellow LED red

Electrical specifications

Operating voltage No-load supply current I0 Input/Output Synchronisation

Synchronisation frequency Common mode operation Multiplex operation Input Input type

Output Output type Repeat accuracy Rated operational current I_e Voltage drop U_d Switching frequency f Range hysteresis H Temperature influence

Standard conformity Standards Ambient conditions Ambient temperature Storage temperature Mechanical specifications Protection degree Connection Material Housing Transducer

Mass

30 ... 500 mm 50 ... 500 mm 0 ... 30 mm 100 mm x 100 mm approx. 380 kHz approx. 50 ms

permanent: Power-on flashing: TEACH-IN function object detected permanent: switching state switch output flashing: TEACH-IN function normal operation: "fault" TEACH-IN function: no object detected

10 ... 30 V DC , ripple 10 $\%_{SS}$ \leq 50 mA

bi-directional 0 level $-U_B...+1$ V 1 level: +4 V... $+U_B$ input impedance: > 12 KOhm synchronisation pulse: \geq 100 $\mu s,$ synchronisation interpulse period: \geq 2 ms

CE

≤ 95 Hz \leq 95/n Hz, n = number of sensors

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 kΩ; TEACH-IN pulse: \geq 1 s

1 switch output E4, npn NO/NC, parameterisable $\leq 0{,}5~$ % of switching point 200 mA , short-circuit/overload protected ≤ 2,5 V \leq 10 Hz 1 % of the set operating distance < 2 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K) IP65 connector V15 (M12 x 1), 5 pin

brass, nickel-plated, plastic components PBT epoxy resin/hollow glass sphere mixture; polyurethane foam 135 g

097966_ENG.xml

2004-11-04

Subject to reasonable modifications due to technical advances

Printed in Germany

Description of the sensor functions

Synchronisation

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. The synchronisation of multiple sensors can be realised as follows:

External synchronisation:

The sensor can be synchronised by the external application of a square wave voltage. A synchronisation pulse at the synchronisation input starts a measuring cycle. The pulse must have a duration greater than 100 μ s. The measuring cycle starts with the falling edge of a synchronisation pulse. Two operating modes are available:

- 1. Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchronised.
- The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.

Internal synchronisation:

The synchronisation connections of up to 5 sensors capable of internal synchronisation are connected to one another. When power is applied, these sensors will operate in multiplex mode.

The state of the switch output will not change until the switching threshold has been exceeded five times as an average of the five measurements is determined internally. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor.

Synchronisation cannot be performed during TEACH-IN and vice versa. The sensors must be operated in an unsynchronised manner to teach the switching point.

A high level at the synchronisation input disables the sensor.

Note:

If the option for synchronisation is not used, the synchronisation input has to be connected to ground (0V) or the sensor has to be operated via a V1 cable connector (4-pin).

Adjusting the switching points

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$. For simple setting the switching point and the output functions the programming unit UB-PROG2 can be used.

Five different output functions can be set:

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. One switching point, normally-open function
- 4. One switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Set target to far switching point
- TEACH-IN switching point A1 with -UB

TEACH-IN one switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B

TEACH-IN one switching point, normally-closed function


- Set target to near switching point
- TEACH-IN switching point A1 with -UB


Model number


UB500-30GM-E4-V15

Characteristic curves/additional information

Characteristic response curve

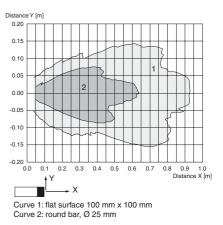



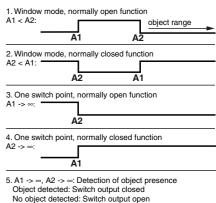

Accessories

Mounting aid BF30 BF30F BF5-30 M-105

Sound deflectors

UVW90-M30 UVW90-K30

Programming Unit UB-PROG2

Cable sockets *)

V15-G-2M-PVC V15-W-2M-PUR

^{*)} For additional cable sockets see section "Accessories".

Printed in Germany

2

Ultrasonic sensor

- Cover sensor with hand or remove all objects from sensing range

- TEACH-IN switching point A2 with +U_B

TEACH-IN detection of object presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with $\mbox{-}U_{B}$
- TEACH-IN switching point A2 with +U_B

Default setting

A1:	unusable area
A2:	nominal sensing range

LED Displays

Displays in dependence on operating mode	Green LED	Red LED	Yellow LED
TEACH-IN switching point Object detected No object detected Object uncertain (TEACH-IN invalid)	flashes off off	off flashes flashes	flashes flashes off
Normal operation	on	off	switching state
Interference	off	flashes	previous state

LED-Window

