## Ultrasonic sensor UB6000-30GM-E5-V15



### **Features**

- Switch output
- 5 different output functions can be set
- TEACH-IN input
- · Synchronisation options
- · Deactivation option
- Temperature compensation
- · Insensitive to compressed air

Electrical connection

+ U<sub>B</sub>

- Teaching input

Synchronous

Switch output

Standard symbol/Connections:

1 (BN) 2 (WH)

5 (GY)

4 (BK)


3 (BU)

Core colours in accordance with EN 60947-5-2.

(version E5, pnp)

U

### **Dimensions**

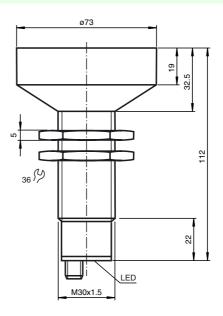

# **Technical data**

CE

General specifications

Sensing range Adjustment range Unusable area Standard target plate Transducer frequency Response delay

Indicators/operating means

LED green

LED yellow

LED red

**Electrical specifications** 

Operating voltage No-load supply current I<sub>0</sub>

Input/Output

Synchronisation

Synchronisation frequency Common mode operation

Multiplex operation Input

Input type

Output

Output type Repeat accuracy Rated operational current I<sub>e</sub>

Voltage drop U<sub>d</sub> Switching frequency f

Range hysteresis H Temperature influence

Standard conformity

Standards **Ambient conditions** Ambient temperature

Storage temperature Mechanical specifications

Protection degree Connection Material Housing

Transducer Mass

350 ... 6000 mm 400 ... 6000 mm

0 ... 350 mm 100 mm x 100 mm approx. 65 kHz

approx. 650 ms

permanent: Power-on flashing: TEACH-IN function object detected permanent: switching state switch output flashing: TEACH-IN function

normal operation: "fault"
TEACH-IN function: no object detected

10 ... 30 V DC , ripple 10  $\%_{\mbox{\footnotesize SS}}$ 

 $\leq$  50 mA

bi-directional 0 level -U<sub>B</sub>...+1 V 1 level: +4 V...+U<sub>B</sub> input impedance: > 12 KOhm

synchronisation pulse:  $\geq 100~\mu s,$  synchronisation interpulse period:  $\geq 2~ms$ 

 $\leq$  7/n Hz, n = number of sensors

1 TEACH-IN input, operating range 1: -U<sub>B</sub> ... +1 V, operating range 2: +4 V ... +U<sub>B</sub> input impedance: > 4.7 k $\Omega$ ; TEACH-IN pulse:  $\geq$  1 s

1 switch output E5, pnp NO/NC, parameterisable

 $\leq$  0,5 % of switching point 200 mA, short-circuit/overload protected

≤ 2,5 V ≤ 0,8 Hz

1 % of the set operating distance

< 2 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

connector V15 (M12 x 1), 5 pin

brass, nickel-plated, plastic components PBT

epoxy resin/hollow glass sphere mixture; polyurethane foam

250 g

### Connector V15



097974\_ENG.xml

#### **Description of the sensor functions**

### **Synchronisation**

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. The synchronisation of multiple sensors can be realised as follows:

#### External synchronisation:

The sensor can be synchronised by the external application of a square wave voltage. A synchronisation pulse at the synchronisation input starts a measuring cycle. The pulse must have a duration greater than 100 µs. The measuring cycle starts with the falling edge of a synchronisation pulse. Two operating modes are available:

- 1. Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchro-
- 2. The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.

#### Internal synchronisation:

The synchronisation connections of up to 5 sensors capable of internal synchronisation are connected to one another. When power is applied, these sensors will operate in multiplex mode.

The state of the switch output will not change until the switching threshold has been exceeded five times as an average of the five measurements is determined internally. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor.

Synchronisation cannot be performed during TEACH-IN and vice versa. The sensors must be operated in an unsynchronised manner to teach the switching point.

A high level at the synchronisation input disables the sensor.

#### Note:

If the option for synchronisation is not used, the synchronisation input has to be connected to ground (0V) or the sensor has to be operated via a V1 cable connector (4-pin).

### Adjusting the switching points

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage -U<sub>B</sub> or +U<sub>B</sub> to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Evaluation limit A1 is taught with -UB, A2 with +UB. For simple setting the switching point and the output functions the programming unit UB-PROG2 can be used.

Five different output functions can be set:

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. One switching point, normally-open function
- 4. One switching point, normally-closed function
- 5. Detection of object presence

# **TEACH-IN** window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UR
- Set target to far switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>

### **TEACH-IN** window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>
- Set target to far switching point
- TEACH-IN switching point A1 with -UB

### **TEACH-IN** one switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UR


### TEACH-IN one switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>

## UB6000-30GM-E5-V15


## Characteristic curves/additional information

### Characteristic response curve

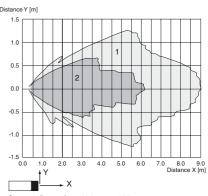

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

## Programmed switching output function

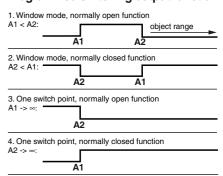

5. A1 -> ∞, A2 -> ∞: Detection of object presence Object detected: Switch output closed No object detected: Switch output open

#### **Accessories**

### Mounting aid

BF30 BF5-30

### **Programming unit**

**UB-PROG2** 

### Cable sockets \*)

V15-G-2M-PVC V15-W-2M-PUR

\*) For additional cable sockets see section "Accessories".

### **Ultrasonic sensor**

### UB6000-30GM-E5-V15

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +UB

## **TEACH-IN** detection of object presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with - $\mathrm{U}_\mathrm{B}$
- TEACH-IN switching point A2 with +UB

### **Default setting**

A1: unusable area

A2: nominal sensing range

#### **LED Displays**

Displays in dependence on operating mode	Green LED	Red LED	Yellow LED
TEACH-IN switching point			
Object detected	flashes	off	flashes
No object detected	off	flashes	flashes
Object uncertain (TEACH-IN invalid)	off	flashes	off
Normal operation	on	off	switching state
Interference	off	flashes	previous state

### **LED-Window**

