UB500-18GM75-E7-V15




Features

- 2 switch outputs
- 3 different output functions can be set
- TEACH-IN input
- Temperature compensation
- Very small unusable area


Electrical connection

Standard symbol/Connections:

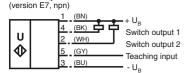

Core colours in accordance with EN 60947-5-2.

Dimensions

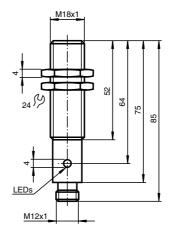



Technical data

General specifications Sensing range Adjustment range 30 ... 500 mm 50 ... 500 mm Unusable area 0 ... 30 mm Standard target plate Transducer frequency Response delay approx. 50 ms

Indicators/operating means LED yellow

I FD red

Electrical specifications

Operating voltage No-load supply current I₀

Input Input type

Output Output type Repeat accuracy

Rated operational current I_e Voltage drop U_d Switching frequency f Range hysteresis H

Temperature influence Standard conformity Standards

Ambient conditions Ambient temperature

Storage temperature

Mechanical specifications Protection degree

Connection Material Housing

Transducer Mass

100 mm x 100 mm approx. 380 kHz

indication of the switching state flashing: TEACH-IN function object detected "Error", object uncertain in TEACH-IN function: No object detected

10 ... 30 V DC , ripple 10 $\%_{\mbox{\footnotesize SS}}$ \leq 50 mA

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 k Ω ; TEACH-IN pulse: \geq 1 s

CE

2 switch outputs npn, NO/NC, parameterisable 2 x 100 mA , short-circuit/overload protected

≤ 3 V max. 10 Hz

1 % of the set operating distance ± 1,5 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

connector V15 (M12 x 1), 5 pin

brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

Connector V15



Adjusting the switching points

The ultrasonic sensor features two switch outputs with one teachable switching point. The switching points are set by applying the supply voltage -U_B or +U_B to the TEACH-IN input.

The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with - U_B , A2 with + U_B .

Three different output functions can be set:

- 1. normally-open function
- 2. normally-closed function
- 3. Detection of object presence

TEACH-IN normally-open function

Switching point for switch output 1 < switching point for switch output 2

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with -U_B
- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with +U_B

Comments: The order doesn't make any difference. If you want, you can set only one switching point.

TEACH-IN normally-closed function

Switching point for switch output 2 < switching point for switch output 1

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with -UR
- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with +U_B

Comments: The order doesn't make any difference. If you want, you can set only one switching point. If both switching points are equal, the sensor works in close function.

TEACH-IN detection of object presence

- Cover the sensor with the palm, or remove all objects from the detection range of the sensor
- TEACH-IN switching point for switch output 1 with -UB
- TEACH-IN switching point for switch output 2 with +U_R

Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

Default setting of switching points

Switch output 1: unusable area

Switch output 2: nominal sensing range

LED Displays

Displays in dependence on operating	Red	LED 1 yellow	LED 2 yellow
mode	LED		
TEACH-IN switching point 1			
Object detected	off	flashes	off
No object detected	flashes	off	off
Object uncertain (TEACH-IN invalid)	on	off	off
TEACH-IN switching point 2:			
Object detected	off	off	flashes
no object detected	flashes	off	off
Object uncertain (TEACH-IN invalid)	on	off	off
Normal operation	off	switch state 1	switch state 2
Fault	on	previous state	previous state


Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

UB500-18GM75-E7-V15


Characteristic curves/additional information

Characteristic response curve

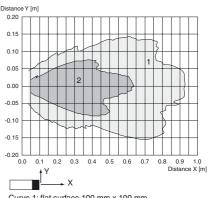

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Programmed switching output function

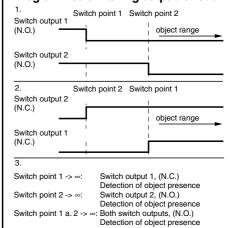

Accessories

Programming device

UB-PROG3

Mounting aids/fixing flanges

OMH-04

BF 18

BF 18F

BF 5-30

Sound deflector

UVW90-K18

Cable sockets*)

V15-G-2M-PVC

V15-W-2M-PUR

*) For additional cable sockets see section "Accessories".