

Features

- 2 switch outputs
- Selectable sound lobe width
- TEACH-IN input
- Temperature compensation

Electrical connection

+ U_B

Teaching input

Switch output 1

Switch output 2

Standard symbol/Connections:

1 (BN)

5 (GY)

2 (WH)

(BK)

(BU)

Core colours in accordance with EN 60947-5-2.

(version E23, pnp)

U

• Very small unusable area

Technical data General specifications

Sensing range Adjustment range 70 ... 1000 mm Unusable area 0 ... 70 mm Standard target plate Transducer frequency Response delay approx. 125 ms Indicators/operating means

LED yellow I FD red

Electrical specifications

Operating voltage No-load supply current I₀

Input Input type

Output

Output type Repeat accuracy Rated operational current I_e Voltage drop U_d

Switching frequency f Range hysteresis H Temperature influence Standard conformity

Standards Ambient conditions Ambient temperature

Storage temperature Mechanical specifications

Protection degree Connection

Material Housing Transducer

Mass

90 ... 1000 mm 100 mm x 100 mm approx. 205 kHz

LEDS

M12 x 1

indication of the switching state flashing: TEACH-IN function object detected "Error", object uncertain in TEACH-IN function: No object detected

M18 x 1

75 85

CE

10 ... 30 V DC , ripple 10 $\%_{\mbox{\footnotesize SS}}$ \leq 50 mA

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 k Ω ; TEACH-IN pulse: \geq 1 s

2 switch outputs pnp, NO/NC

< 1 %

2 x 100 mA , short-circuit/overload protected

≤ 3 V

max. 3 Hz

1 % of the set operating distance

± 1,5 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

connector V15 (M12 x 1), 5 pin

brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

Connector V15



Model number

Adjusting the switching points

The ultrasonic sensor features two switch outputs with one teachable switching point. The switching points are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with -U_B, A2 with +U_B.

TEACH-IN switching point for switch output 1

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with -UB

TEACH-IN switching point for switch output 2

- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with +UB

TEACH-IN detection of object presence

- Cover the sensor with your hand, or remove all objects from the sensing range
- TEACH-IN switching point for switch output 1 with -U_B
- TEACH-IN switching point for switch output 2 with +UB

Comments

Only one switch output can be configured for detection of presence of objects. If the sensor detects an objects within the maximum detection range, the switch output switches.

Default setting of switching points

Switch output 1: unusable area

Switch output 2: nominal sensing range

LED Displays

Displays in dependence on operating mode	Red LED	LED 1 yellow	LED 2 yellow
TEACH-IN switching point 1 Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	flashes off off	off off off
TEACH-IN switching point 2: Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	off off off	flashes off off
Normal operation	off	switch state 1	switch state 2
Fault	on	previous state	previous state

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

- switch off the power supply
- connect the Teach-input wire to -UR
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range
- disconnect the Teach-input wire from -U_B and the changing is saved


2. Wide angle sound cone

- switch off the power supply
- connect the Teach-input wire with +U_R
- switch on the power supply
- the red LED double-flashes with a long pause before the


Characteristic curves/additional information

UB1000-18GM75-E23-V15

Characteristic response curve

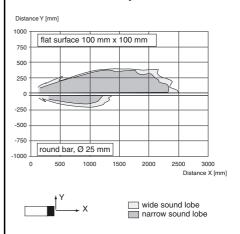

Programmed switching output function

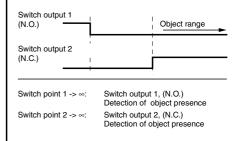

Accessories

Programming device

UB-PROG3

Mounting aids/fixing flanges

OMH-04

BF 18

BF 18F

BF 5-30

Sound deflector

UVW90-K18

Cable sockets*)

V15-G-2M-PVC

V15-W-2M-PUR

*) For additional cable sockets see section "Accessories".

Ultrasonic sensor

UB1000-18GM75-E23-V15

- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-input wire from +U_B and the changing is saved

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.