

## Ultrasonic sensor UB200-12GM-E5-V1




## Features

- Switch output
- Very small unusable area
- 5 different output functions can be set
- TEACH-IN input
- Temperature compensation

## Electrical connection

Standard symbol/Connections:  
(version E5, pnp)

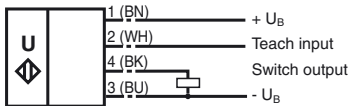


Core colours in accordance with EN 60947-5-2.

## Connector V1



## Dimensions

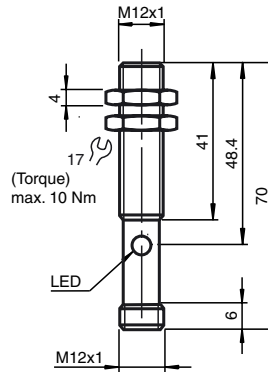

## Technical data



### General specifications

|                       |                 |
|-----------------------|-----------------|
| Sensing range         | 15 ... 200 mm   |
| Adjustment range      | 20 ... 200 mm   |
| Unusable area         | 0 ... 15 mm     |
| Standard target plate | 100 mm x 100 mm |
| Transducer frequency  | approx. 400 kHz |
| Response delay        | approx. 30 ms   |

### Indicators/operating means

|            |  |
|------------|--|
| LED yellow | indication of the switching state<br>flashing: TEACH-IN function object detected |
| LED red    | permanently red: Error<br>red, flashing: TEACH-IN function, object not detected  |

### Electrical specifications

|                              |   |
|------------------------------|---|
| Operating voltage            | 10 ... 30 V DC, ripple 10 % <sub>SS</sub> |
| No-load supply current $I_0$ | ≤ 30 mA                                   |

### Input

|            |   |
|------------|---|
| Input type | 1 TEACH_IN input<br>operating distance 1: - $U_B$ ... +1 V, operating distance 2: +6 V ... + $U_B$<br>input impedance: > 4,7 k $\Omega$ TEACH-IN pulse: ≥ 1 s |
|------------|---|

### Output

|                                 |  |
|---------------------------------|--|
| Output type                     | 1 switch output E5, pnp NO/NC, parameterisable |
| Repeat accuracy                 | ≤ 1 %  |
| Rated operational current $I_e$ | 100 mA, short-circuit/overload protected       |
| Voltage drop $U_d$              | ≤ 3 V  |
| Switching frequency $f$         | ≤ 13 Hz  |
| Range hysteresis $H$            | 1 % of the set operating distance              |
| Temperature influence           | ± 1.5 % of full-scale value                    |

### Standard conformity

|           |              |
|-----------|--------------|
| Standards | EN 60947-5-2 |
|-----------|--------------|

### Ambient conditions

|                     |                               |
|---------------------|-------------------------------|
| Ambient temperature | -25 ... 70 °C (248 ... 343 K) |
| Storage temperature | -40 ... 85 °C (233 ... 358 K) |

### Mechanical specifications

|                   |   |
|-------------------|---|
| Protection degree | IP65  |
| Connection        | V1 connector (M12 x 1), 4-pin   |
| Material          |   |
| Housing           | brass, nickel-plated  |
| Transducer        | epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT |
| Mass              | 25 g  |

### Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

1. Window mode, normally-open function
2. Window mode, normally-closed function
3. one switching point, normally-open function
4. one switching point, normally-closed function
5. Detection of object presence

### TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with  $-U_B$
- Set target to far switching point
- TEACH-IN switching point A2 with  $+U_B$

### TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with  $+U_B$
- Set target to far switching point
- TEACH-IN switching point A1 with  $-U_B$

### TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with  $+U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with  $-U_B$

### TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with  $-U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with  $+U_B$

### TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with  $-U_B$
- TEACH-IN switching point A2 with  $+U_B$

### Default setting of switching points

A1 = blind range, A2 = nominal distance

### LED Displays

| Displays in dependence on operating mode | Red LED | Yellow LED      |
|--|---------|-----------------|
| <b>TEACH-IN switching point:</b>         |         |                 |
| Object detected                          | off     | flashes         |
| No object detected                       | flashes | off             |
| Object uncertain (TEACH-IN invalid)      | On      | off             |
| Normal operation                         | off     | Switching state |
| Fault                                    | on      | Previous state  |


### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below  $0\text{ }^{\circ}\text{C}$ , for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

**UB200-12GM-E5-V1**

### Characteristic curves/additional information

#### Characteristic response curve

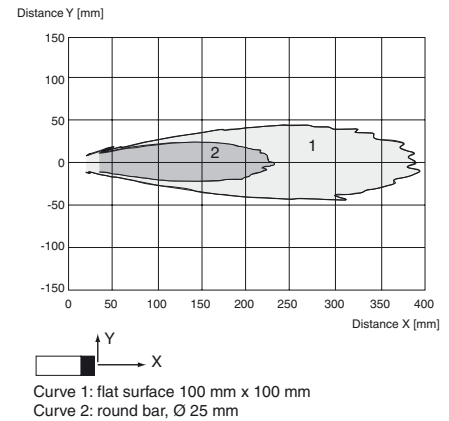

#### Programmed switching output function

1. Window mode, normally open function  
A1 < A2:
2. Window mode, normally closed function  
A2 < A1:
3. One switch point, normally open function  
A1 -> ∞:
4. One switch point, normally closed function  
A2 -> ∞:
5. A1 -> ∞, A2 -> ∞: Detection of object presence  
Object detected: Switch output closed  
No object detected: Switch output open

### Accessories

#### Programming device

UB-PROG2

#### Mounting aids/fixing flanges

BF 5-30

BF 12

BF 12-F

#### Cable sockets<sup>\*)</sup>

V1-G-2M-PVC

V1-W-2M-PUR

<sup>\*)</sup> Additional cable sockets find in section „Accessories“.